




Manual de usuario

RGC-032F

El Dehumificador Portatil Más Compacto

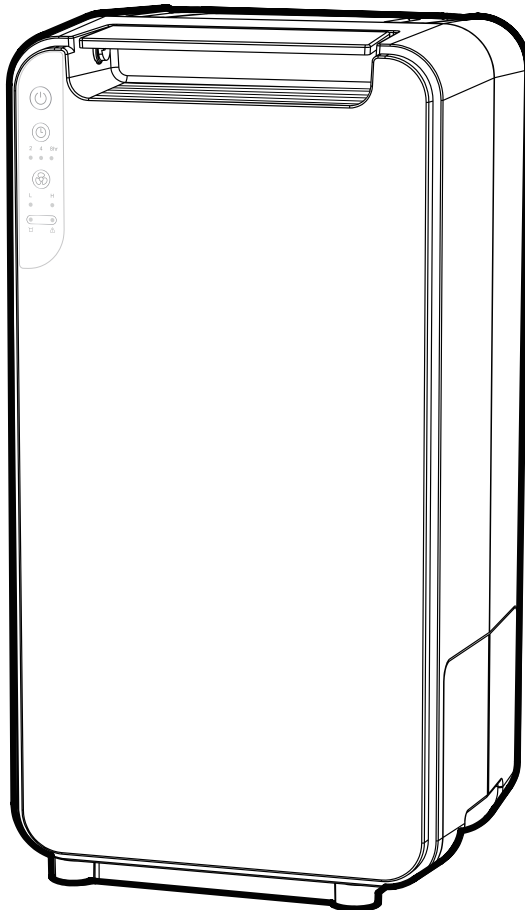

Por favor, lea este manual de instrucciones antes de operar el equipo y consérvelo en un lugar seguro para futuras consultas


INSTRUCCIONES IMPORTANTES DE SEGURIDAD

ADVERTENCIA – Este aparato está destinado únicamente para uso en un entorno doméstico. Cualquier otro uso no está recomendado por el fabricante y puede provocar incendios, descargas eléctricas u otras lesiones a personas o daños a la propiedad.

When using electrical appliances, basic safety precautions should always be followed:

1. No opere la unidad si el cable o el enchufe están dañados, si presenta fallas de funcionamiento o si ha recibido daño de cualquier manera. Devuélvala a un centro de servicio autorizado para su revisión y reparación.
2. Esta unidad debe mantenerse siempre en posición vertical para evitar daños. Colóquela sobre una superficie plana y estable o fíjela firmemente en la pared.
3. Verifique el voltaje del hogar y asegúrese de que coincida con las especificaciones nominales de la unidad antes de utilizarla.
4. Opere la unidad a una temperatura ambiente entre 1 °C y 40 °C.
5. Asegúrese de que las entradas y salidas de aire no estén bloqueadas ni cubiertas.
6. No coloque la unidad cerca de cortinas u otros objetos. Distancia mínima de 30 cm.
7. Al usar la unidad para secar ropa húmeda, mantenga la ropa a una distancia segura para evitar que el agua caiga sobre la unidad.
8. Nunca coloque objetos sobre la unidad ni la cubra mientras esté en funcionamiento.
9. Este producto es SOLO para uso doméstico y de oficina, no para uso comercial, industrial o en exteriores. No lo utilice en ambientes muy húmedos (por ejemplo, baños).
10. Para evitar descargas eléctricas, no sumerja la unidad, el enchufe ni el cable en agua, ni los rocíe con líquidos.
11. Nunca desconecte el cable de alimentación sin presionar primero la tecla de encendido, ya que esto podría dañar la unidad.
12. Siempre desconecte la unidad cuando no esté en uso o al moverla. Para desconectarla, sujete el enchufe y tire del tomacorriente. Nunca tire del cable.
13. Siempre vacíe el tanque de agua antes de guardar la unidad.
14. Usar el deshumidificador frente a un radiador puede impedir que recoja agua debido al calor.
15. No pase el cable de alimentación por debajo de alfombras, ni lo cubra con tapetes o corredores. Coloque el cable lejos de zonas donde pueda provocar tropiezos.
16. Nunca utilice ni almacene la unidad bajo la luz solar directa.
17. Para reparar la unidad, llévela a un servicio técnico calificado. Las reparaciones realizadas por personas no calificadas pueden causar daños a la unidad o lesiones a personas o bienes, y anular la garantía.
18. Evite usar cables de extensión, ya que pueden sobrecalentarse y provocar un incendio. Solo utilice uno si está en perfecto estado.
19. No utilice la unidad sin el filtro de aire y asegúrese de mantenerlo limpio para evitar fallas de funcionamiento y la anulación de la garantía.

APARIENCIA

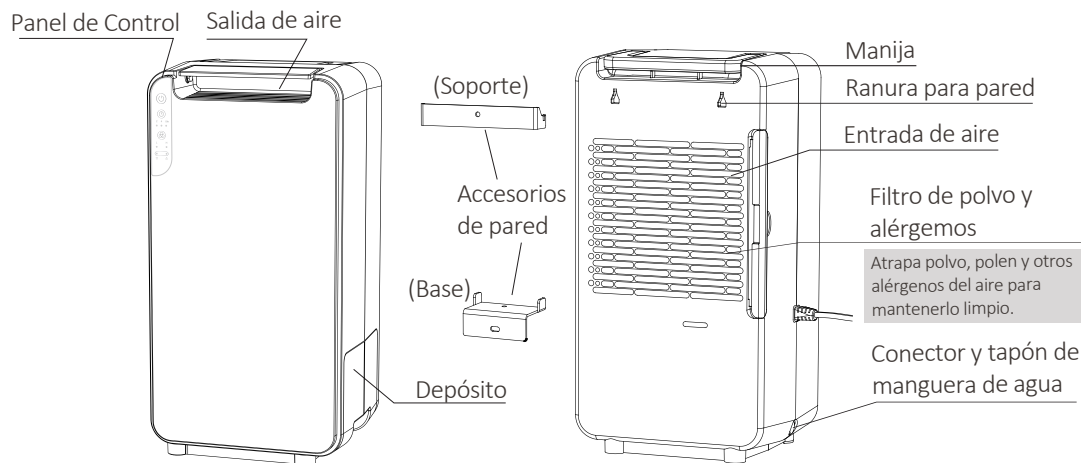

AJUSTES DEL EQUIPO

Coloque la unidad en posición vertical sobre una superficie plana y estable, o móntela firme y verticalmente en la pared (ver pág. 7).


Asegúrese de que esté a una distancia segura de paredes o muebles (ver gráfico).

Mantenga la ropa a 30 cm de la salida de aire de la unidad para evitar que el agua caiga en ella.

¿Dónde colocar el deshumidificador?
Para mejores resultados, colóquelo en un lugar central, como un pasillo o rellano. No lo ubique frente a un radiador ni a la luz directa del sol.



USO SEGURO

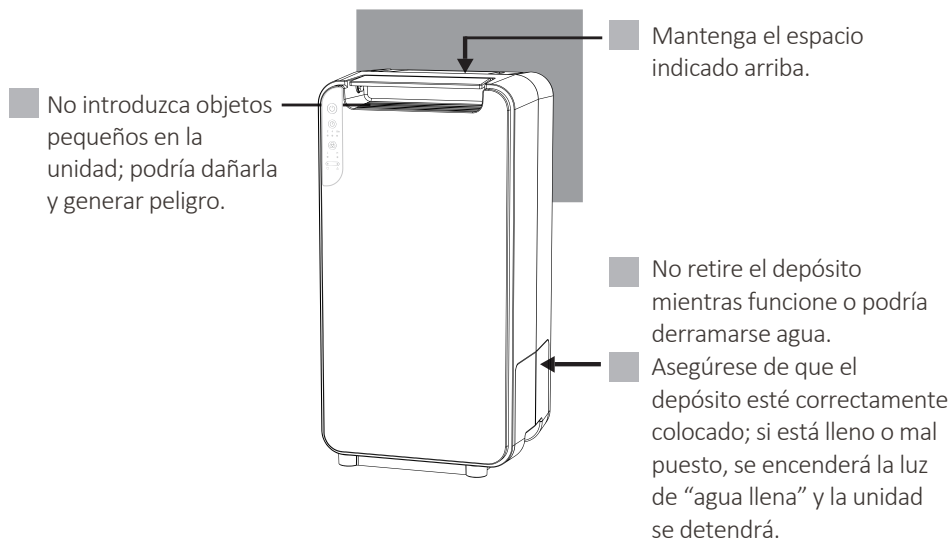

PANEL DE CONTROL



INSTRUCCIONES DE OPERACIÓN

Botón de encendido

Presione la tecla de encendido para encender o apagar la unidad.

El equipo se iniciará con la configuración previa de funcionamiento, excepto el temporizador. Tras apagarlo, el ventilador funcionará 2 minutos más para enfriar y proteger los componentes internos.

Si se restablece la energía tras un corte, la unidad retomará la configuración previa de funcionamiento (incluido el temporizador).

Ajuste de hora

Presione el botón de "AJUSTE DE HORA" para configurar el temporizador; el tiempo restante se mostrará durante el funcionamiento.

→ 2hr → 4hr → 8hr → Continuo (sin LED) →

Selección de modo

Presione el botón "SELECCIÓN DE MODO" para alternar entre los modos:


→ LOW → HIGH →

LOW: La unidad funciona con ventilador lento y calefacción baja.



HIGH: La unidad funciona con ventilador rápido y calefacción alta.

MONTAJE EN PARED (de ser necesario)

Accesorios			
Objeto	Cantidad	Esquema	Aplicación
Soporte superior	1		Para fijar a la pared y sostener el equipo colgado.
Soporte base	1		Para fijar a la pared y sostener el equipo colgado.
Taco de expansión	3		Se inserta en la pared para asegurar el soporte. (Incluye un repuesto adicional.)
Tornillo arandelado	3		Asegura el soporte en la pared. (Incluye un repuesto adicional.)
Tornillo corto	1		Fija el soporte de pared al equipo.

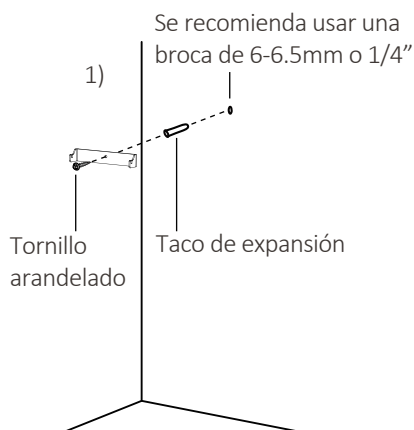


- 1) Primero fije el colgador de montaje a la pared con un tornillo (ver gráfico izquierdo). Para paredes de concreto o ladrillo, taladre primero un orificio de 4 mm e instale un taquete de expansión para el tornillo.
- 2) Cuelgue la unidad en el colgador de montaje usando las ranuras.

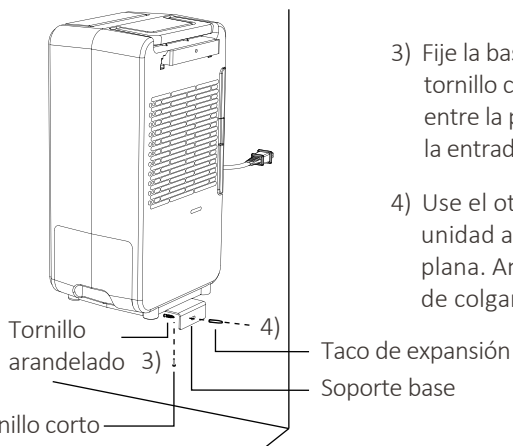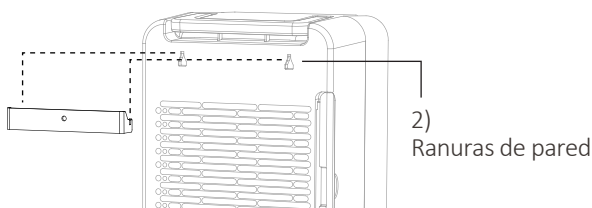

- 3) Fije la base de montaje debajo del equipo con un tornillo corto. Mantenga unos 15 mm de espacio entre la pared y la parte trasera de la unidad para la entrada de aire.
- 4) Use el otro orificio de la base para fijar la unidad a la pared con un tornillo de cabeza plana. Antes de atornillar la base, asegúrese de colgar y ajustar la unidad en posición vertical.

PARA VACIAR EL DEPÓSITO

1. Cuando el deposito se llena, el " ☒ " LED parpadea y la unidad se detendrá luego.
2. No mueva la unidad ni retire el depósito mientras la máquina esté funcionando, ya que podría derramarse agua, dañar la unidad o provocar una descarga eléctrica.
3. Para retirar el depósito, sáquelo y levántelo con cuidado.
4. Vierta el agua, limpie el depósito y coloque nuevamente la tapa y el depósito en su posición correcta.

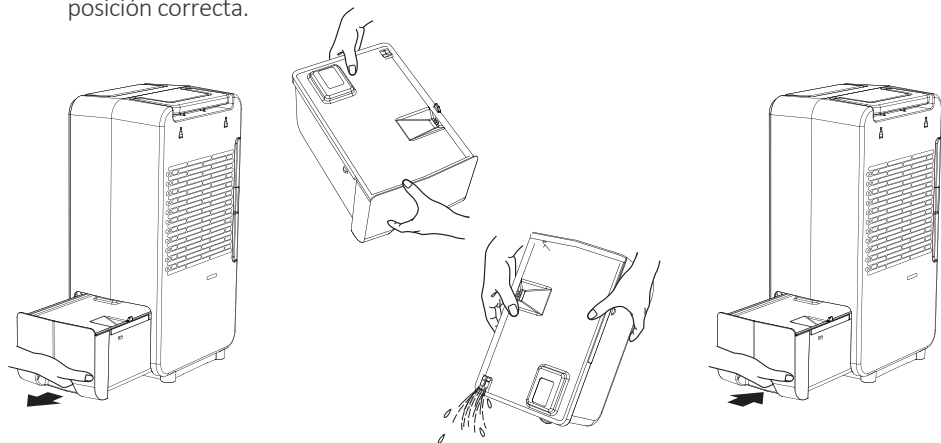

A Retire el depósito

B Vacíe el depósito

C Coloque el depósito


Limpie el depósito con agua limpia si es necesario. No use disolventes, abrasivos ni agua caliente. No retire ni dañe el flotador del depósito, ya que la unidad no funcionará correctamente. El LED " ☒ " parpadea si el depósito no está bien colocado.

DRENAJE CONTINUO

Puede usar una manguera con un diámetro interior de 12 mm para el drenaje continuo del depósito.


1. Retire el tapón del orificio de drenaje del depósito.

Nota: Guarde el tapón para su posible uso futuro (reutilizar el depósito)

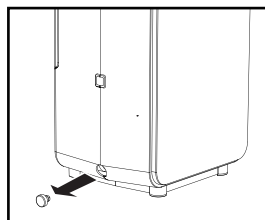

2. Coloque la manguera firmemente en el conector de drenaje. La tubería debe dirigirse al desagüe sin curvas pronunciadas.

Nota: El depósito debe estar en la posición correcta para que la unidad funcione.

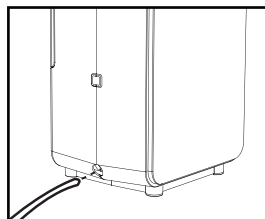


Puede utilizar codos en la tubería de drenaje.

1. Corte la manguera suministrada a una longitud de 4 a 6 cm.



2. Saque el tapón del orificio de drenaje inferior del depósito.

Nota: Guarde el tapón para su posible uso futuro (reutilizar el depósito)



3. Fije firmemente la manguera de 4 a 6 cm al conector de drenaje y conecte el codo.

Nota: Coloque el otro extremo del codo hacia abajo o con inclinación descendente.

4. Coloque firmemente la manguera más larga en el codo. La tubería debe dirigirse al desagüe sin curvas pronunciadas.


Nota: El depósito debe estar en la posición correcta para que la unidad funcione.



MANTENIMIENTO

■ Limpieza de la unidad

1. Apague la unidad, espere a que el ventilador se detenga y desenchúfela.
2. Limpie la superficie con un paño suave y húmedo.
3. Seque bien con una toalla después de limpiar.
4. Para evitar daños, no lave la máquina con agua ni deje que el agua caiga en la entrada o salida de aire.

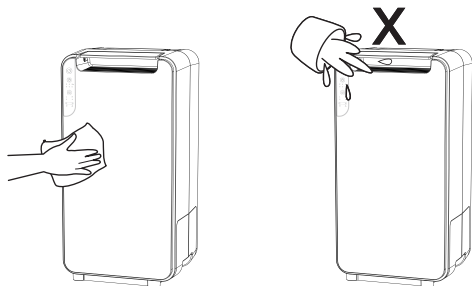


■ Limpieza del filtro

Los filtros sucios reducen el flujo de aire y el rendimiento. Límpielos cada dos semanas.

1. Apague la unidad y retire el filtro.
2. Aspire cuidadosamente el polvo del filtro con una aspiradora (evite dañarlo). No lo enjuague con agua.
3. Vuelva a colocar el filtro en su posición.
4. Si el filtro está cubierto de polvo, el flujo de aire y el rendimiento se verán afectados. Revise periódicamente para limpiar el polvo.



No use la unidad sin el filtro de aire.
La acumulación de polvo puede causar fallos y sobrecalentamiento.

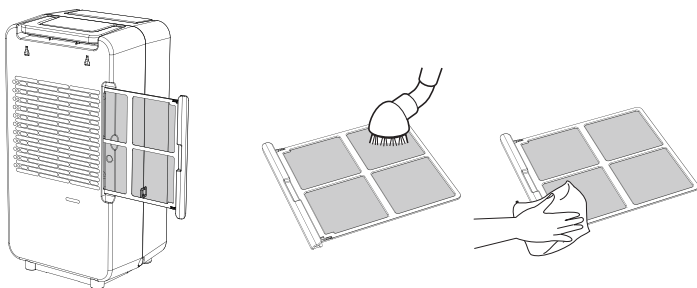

■ Antes de almacenar

1. Apague la unidad, espere a que se detenga y desenchúfela.
2. Deje que la unidad drene alrededor de un día. Limpie y seque el depósito.
3. Limpie el filtro y la unidad. Cubra la unidad para evitar polvo y guárdela en posición vertical en un lugar fresco y seco.
4. No la exponga a la luz solar directa.

SOLUCIÓN DE PROBLEMAS

Falla	Procedimiento
El ventilador sigue funcionando unos 2 minutos después de apagar la unidad.	Esto es un funcionamiento normal de la unidad y no representa ningún problema.
La unidad opera a una temperatura ambiente de entre 1 a 40 °C. Fuera de este rango dejará de deshumidificar.	Esto es normal, la unidad solo deshumidifica dentro de este rango de temperatura.
La unidad emite un olor extraño.	Esto es normal e inofensivo, ya que se utiliza un rotor de absorción para captar humedad. También puede absorber olores de cigarrillos, cosméticos, sprays para el cabello, materiales de construcción y muebles nuevos, y al calentarse libera esos olores al ambiente.
El LED de advertencia REVISAR "  "	El filtro está sucio u obstruido. Revíselo y límpielo.

ADVERTENCIA: Si persiste algún otro problema, contacte a su distribuidor o a un técnico cualificado. NO intente reparar la unidad, ya que podría recibir una descarga eléctrica y anular la garantía.

ESPECIFICACIONES

Modelo	RGC-032F
Consumo energético (H)	320W
Alimentación	220V~ 50Hz
Capacidad (dehumificación)	3.2 litros / day
Capacidad del depósito	1.5 litros
Rango de operación	1 ~ 40°C
Dimensiones (l x a x h)	L170 x A219 x H414 mm




EN

User Manual

RGC-032F

The Most Compact & Portable Dehumidifier

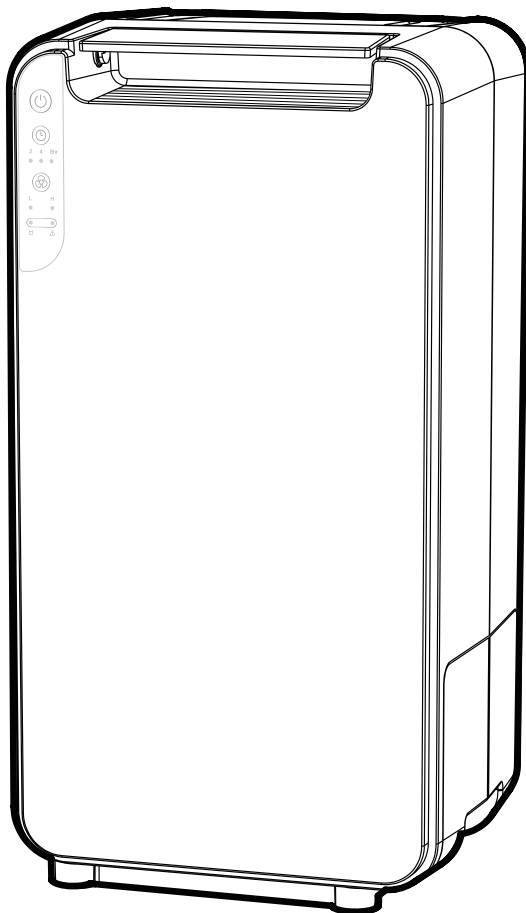

Please read this instruction manual before operating and keep safe for future reference.


IMPORTANT SAFETY INSTRUCTIONS

WARNING - This appliance is intended for use in a domestic environment only. Any other use is not recommended by the manufacturer and may cause fire, electrical shocks or other injury to person or property.

When using electrical appliances, basic safety precautions should always be followed:

1. Do not operate the unit with a damaged cord or plug. After it malfunctions or has been dropped or damaged in any way, return to an authorised service facility for examination and repair.
2. This unit should always be kept in an upright position to avoid any damage. Locate the unit on a flat stable surface or mounted vertically and firmly on the wall.
3. Check the household voltage to ensure it matches the units rated specification before operating.
4. Operate this unit in an ambient temperature between 1°C and 40°C.
5. Ensure that the air inlet and outlet are not blocked or covered.
6. Do not place the unit too close to curtains or other objects - minimum distance 30cm.
7. When using the unit to dry wet clothes in the room, please keep the clothing at a safe distance from the unit to prevent water from dropping onto the unit.
8. Never place anything on top of the unit and do not cover with any kind of material while in use.
9. This product is intended for domestic and light office use ONLY and not for commercial, industrial or outdoor use. Never use in very damp rooms (bathroom for example).
10. To protect against electrical shocks, do not immerse unit, plug or cord in water, or spray with liquids.
11. Never unplug the power cord without pressing the "Power key" first, as this could damage the unit.
12. Always unplug the unit when not in use or moving location. To disconnect from the power supply, grip the plug and pull from the power socket. Never pull by the cord.
13. Always empty the water tank before storing the unit away.
14. Using the dehumidifier in front of a warm radiator can result in the dehumidifier not collecting any water because of the heat from the radiator.
15. Do not run power cord under carpeting, or cover with rugs or runners. Arrange the cord away from areas where it may be tripped over.
16. Never operate or store the unit in direct sunlight.
17. To repair the unit, take it to a qualified service engineer. Repairs carried out by unqualified people may cause damage to the unit or injury to persons or property and void the warranty.
18. Where possible, avoid the use of an extension cable as they may overheat and cause a risk of fire. Only use an extension cord after ensuring it is in perfect condition.
19. Do not use the unit without the air filter and make sure that the filter is kept clean to avoid malfunction and invalidating the warranty.

APPEARANCE

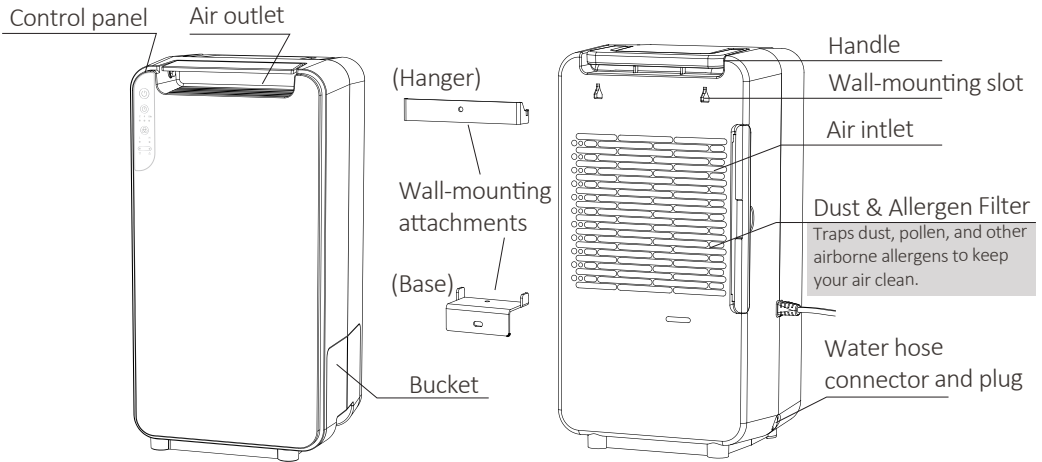


UNIT SETUP

Place the unit in an upright position on a stable, flat surface, or mount firmly and vertically on a wall (see p. 7).


Please ensure the unit is a safe distance away from a wall or furniture (see the right graphic).

Please keep clothes at a safe distance of 30 cm from air outlet of the unit to prevent water dripping into the unit.


Where to position your dehumidifier?
For best results position the dehumidifier somewhere central like a landing or a hallway. Do not position in front of a radiator or in direct sunlight.

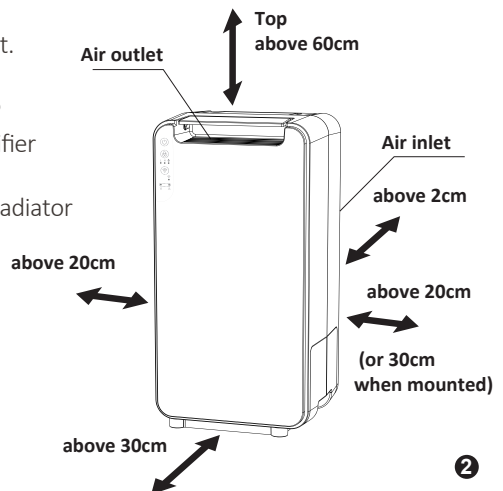

TO OPERATE SAFELY

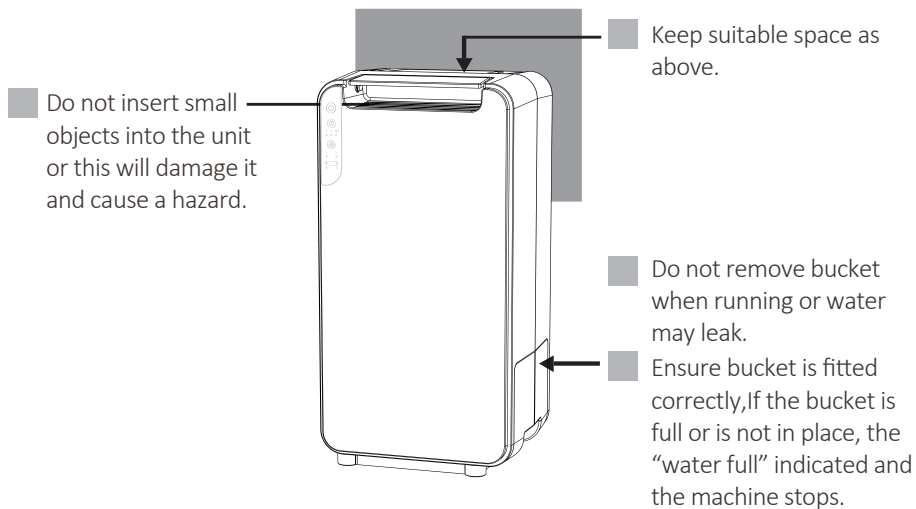

CONTROL PANEL

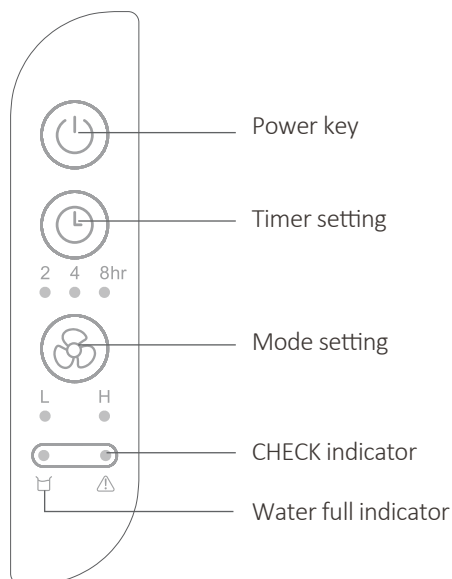

OPERATING INSTRUCTIONS

Power key

Press power key to turn on or off the unit.

The appliance will be on with prior Mode setting of last run, except timer.

After turn-off, the fan will continue to run for two minutes to help cooling and protecting the internal components.

Once the power is restored after a power failure, the appliance will continue to run the prior settings (including the left timer) before power failure.

Timer setting

Press the TIMER button to set the timer and the remaining time is displayed with the operation.

→ 2hr → 4hr → 8hr → continuous (no led) →

Mode setting

Press the MODE button to select modes in the following loop:


→ LOW → HIGH →

LOW: the machine runs with low fan speed and low heater.



HIGH: the machine runs with high fan speed and high heater.

WALL MOUNTING (if needed)

Accessories			
Item	Quantity	Schematic	Application
Mounting Hanger	1		For attaching to the wall to support hanging the machine.
Mounting Base	1		For attaching to the wall to support hanging the machine.
Expansion stud	3		Inserted into the wall for securing the wall mount bracket. (Have an extra spare.)
Washer-head screw	3		Securing the wall-mount bracket. (Have an extra spare.)
Short screw	1		Secure the wall mount to the machine.

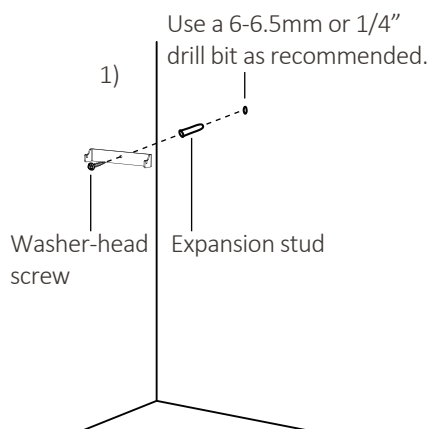


- 1) First fix the Mounting Hanger on the wall with a screw (see the left graphic).
For concrete or brick wall, you may first drill a 4mm hole and install an expansion stud for the screw.
- 2) Hang the unit on the mounting Hanger with the slots.

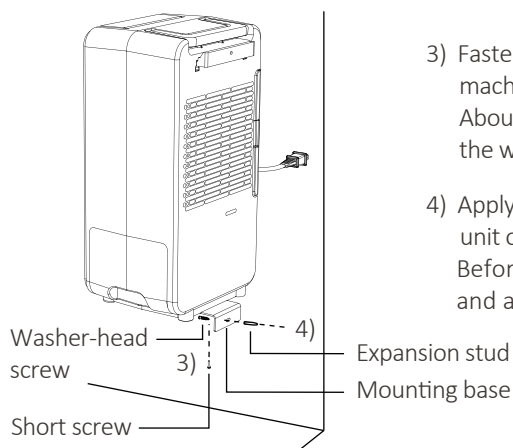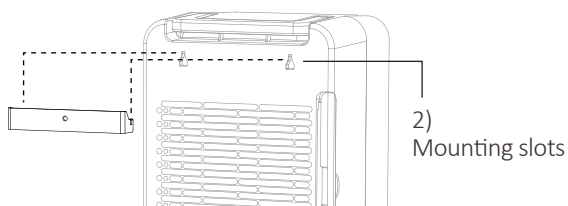

- 3) Fasten the Mounting Base under the machine with a short screw.
About 15mm clearance will be kept between the wall and the back of the unit for air intake.
- 4) Apply the other hole of the base to fix the unit on the wall with a washer-head screw.
Before screwing the Base, be sure to hang and adjust the unit vertically.

TO EMPTY THE BUCKET

1. When the bucket is full, the "  " led blinks and the unit stops in a few minutes.
2. Do not move the unit or remove the bucket if the machine is still operating, as water may leak, damage the unit or cause an electric shock.
3. To remove the bucket, pull it out and lift carefully.
4. Pour the water away, clean the bucket and restore the cover and the bucket to the correct position.

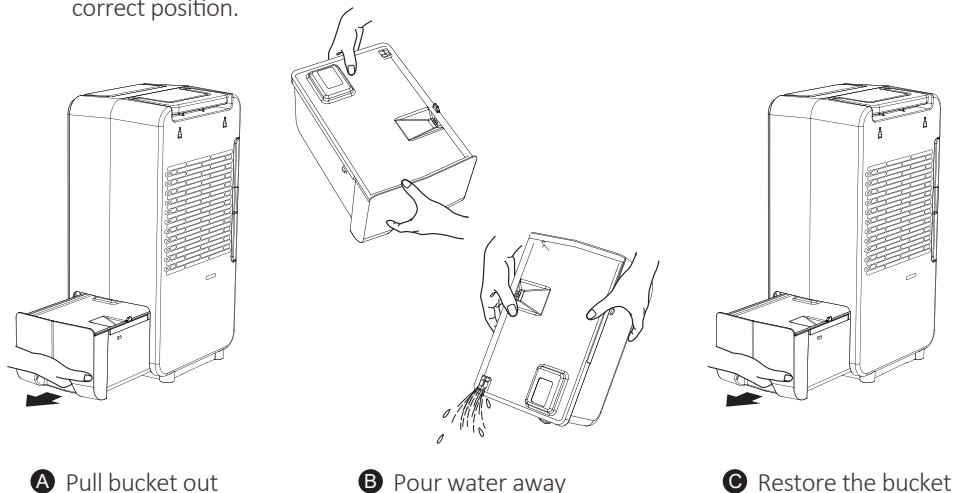


Clean the bucket with clean water if needed. Do not use solvent, abrasive or hot water. Do not remove or damage the float in the bucket, or the unit cannot work correctly. The "  " led blinks if the bucket is not well in place.

TO DRAIN WATER

You may use a hose with an inner diameter of 12mm for continuous drainage:


1. Remove the plug from the drain hole at the bottom of the bucket.

Note: Keep the plug for future use (when reusing the bucket).

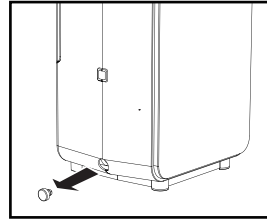

2. Fit the hose firmly on the drain connector. The tubing shall be lead to the drain with no sharp bends.

Note : The bucket must be in the correct position for running.

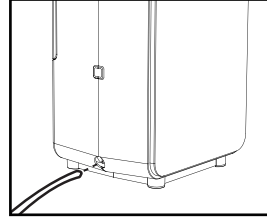


Drain pipe elbows may be utilized when needed.

1. Cut the supplied hose to a length between 4 and 6 cm.



2. Remove the plug from the drain hole at the bottom of the bucket.

Note: Keep the plug for future use (when reusing the bucket).




3. Firmly attach the 4 to 6 cm hose to the drainage fitting and connect the elbow.

Note: Position the other end of the elbow facing downwards or downward slope.

4. Fit the longer hose firmly on the elbow. The tubing shall be lead to the drain with no sharp bends.


Note : The bucket must be in the correct position for running.

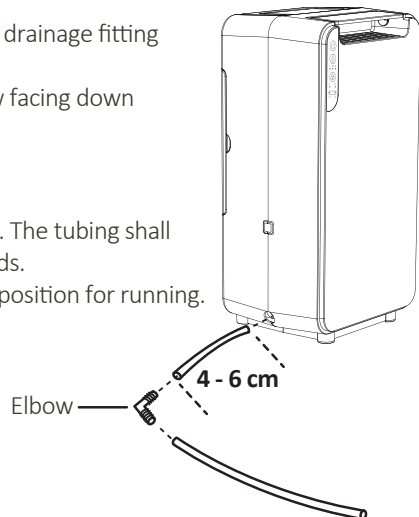

MAINTENANCE

Cleaning the unit

1. Turn off the unit, wait for the fan to stop and unplug from the power socket.
2. Clean the surface with a soft damp cloth.
3. Dry thoroughly with a towel after cleaning.
4. In order to avoid damage, do not wash the machine with water, or let water drip into the air inlet or outlet.

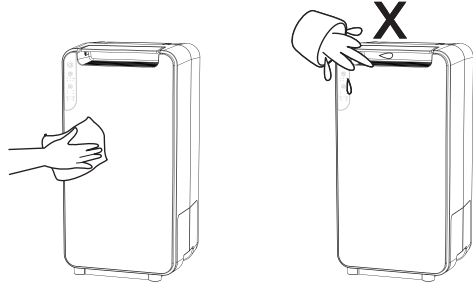


Cleaning the filter

Dusty filters can reduce airflow and performance. Check and clean every two weeks.

1. Turn off the unit and remove the filter from the unit.
2. Carefully vacuum the dust from the filter using a vacuum cleaner (avoid damaging the filter). Do not rinse with water, as it may reduce the filter's effectiveness.
3. Replace the filter in position.
4. If the filter is covered with dust, the airflow and the performance of the unit will be affected. Check the filter periodically to ensure any dust is removed



Do not operate the unit without the air filter.
Dust build-up in the unit can cause malfunction and overheating.

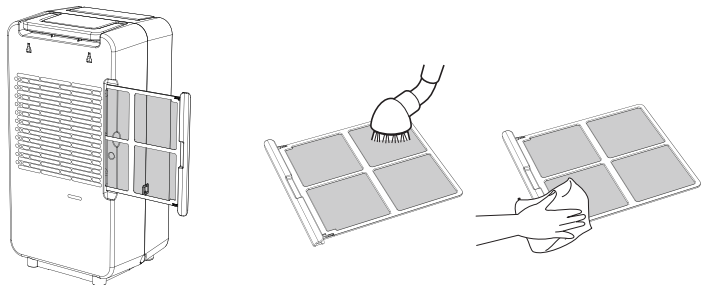

Before storing

1. Turn off the unit, wait for it to stop and unplug from the power socket.
2. Leave the unit to drain for approximately one day. Clean and dry the bucket.
3. Clean the filter and the unit. Cover the unit to prevent it from gathering dust.
Store uprighting in a cool dry place.
4. Do not expose to direct sunlight.

TROUBLESHOOTING

Issue	Possible Solution
The fan is still running about 2 minutes after the unit is turned off.	This is a normal function of the unit and not a cause for concern.
The unit works within room temperature about 1~40°C. It will stop dehumidifying out of this range.	This is normal, as the unit is designed to only dehumidify within this temperature range.
The unit is emitting an unusual odor.	This is a normal and harmless as an adsorption rotor for capturing moisture is used. It may also absorb odors from cigarettes, cosmetics, hair sprays, building materials and new furniture, and when heated decomposes and discharges the odor into the room.
The CHECK  led is blinking to signify a blockage in the air inlet or outlet	The filter is dirty or clogged. Please check and clean it.

WARNING: If any other issue persists, contact your retailer or a qualified service professional. DO NOT try to repair this unit yourself, as doing so could lead to risk of electric shock and the voiding of your warranty.

SPECIFICATIONS

Model	RGC-032F
Power consumption(H)	320W
Power supply	220V~ 50Hz
Dehumidifying capacity	3.2 litres / day
Capacity water container	1.5 litres
Operating range	1 ~ 40°C
Dimensions (w x d x h)	W219 x D170 x H414 mm

